



Installation

1. ceiling opening

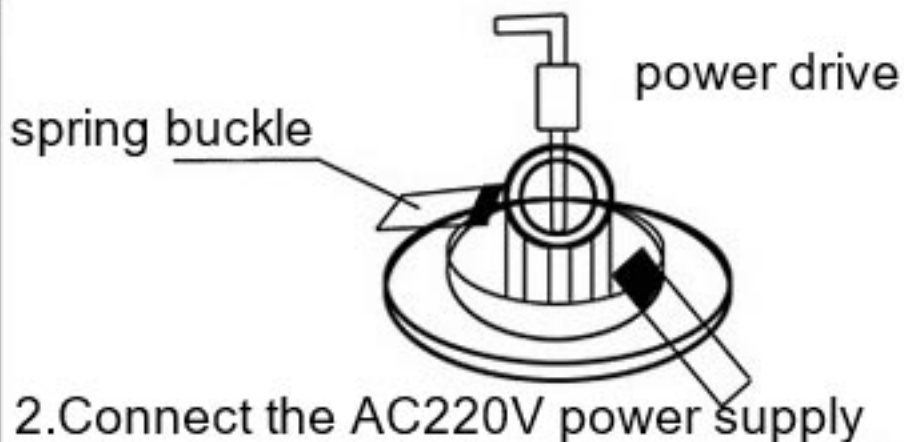

3. Vertically place the snap hook into the ceiling hole

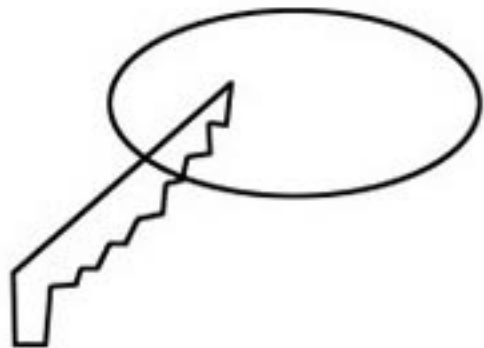